


WINTERIZING INSTRUCTIONS FOR OI RESTROOMS



Before we start, be sure the City Water valve is in the "Off" position.

We start the winterizing process by emptying the Water Heater

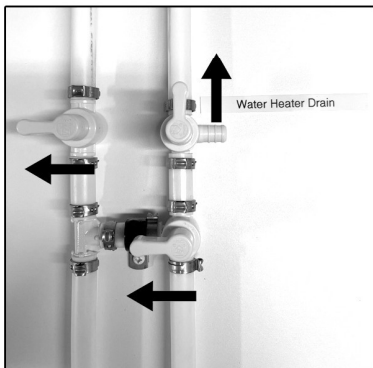

1. Locate the Water Heater Bypass and Drain Valve assembly.

The Bypass valve levers should be turned to the side, preventing water and antifreeze from entering the Water Heater.

The Water Heater Drain valve lever should ALWAYS be turned upwards unless a hose is attached for draining.


2. Locate the Winterizing Hose attached to the valve between the Fresh Water Tank and the Water Pump.

The hose should be tucked away when not in use.



3. Secure the open end of the Winterizing Hose to the Water Heater Drain valve with the hose clamp provided.

Once secured, turn the valve lever towards the hose to open the valve.

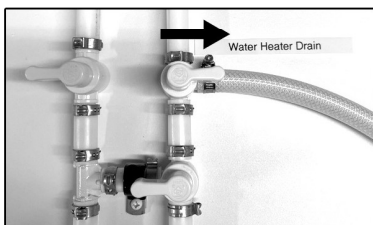

4. Make sure the Water Heater is OFF. Then open the Pressure Relief Valve, located on the top of the Water Heater.

5. Turn on the Water Pump. This should begin to syphon all the remaining water out of the Water Heater and into the water lines of the unit.

6. Flush a Toilet until no water remains in the water lines. (This may take a few moments)
Turn off the pump when done.




WINTERIZING INSTRUCTIONS FOR OI RESTROOMS

Once the Water Heater is emptied...

Return the lever on the Water Heater Drain valve to the upright position, loosen the hose clamp, and remove the hose from the valve.

The Bypass valve levers should remain to the side to prevent antifreeze from entering the Water Heater.

(Always completely flush the lines with water before using the Water Heater again.)

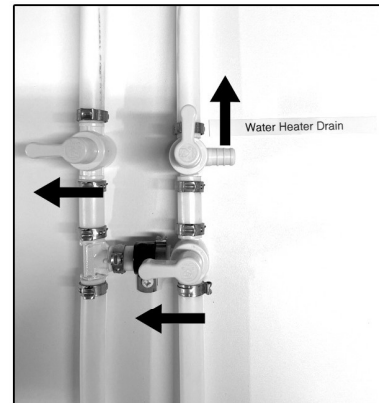

The Winterizing hose can now be placed into a jug or container of antifreeze
(RV & Marine antifreeze is recommended.)

Simply turn on the Water Pump, and the antifreeze will be pumped through the water lines.

Go to each toilet and flush until the color of the antifreeze, then turn off the water supply valve behind it to keep the antifreeze in the line.

Go to each sink and continue to run the faucet until the antifreeze shows, then turn off the water supply valve underneath the sink.

For units with a sprayer, simply attach the sprayer hose, turn on the sprayer valve, spray until you see antifreeze, then shut off the valve.